



MasterScanner XPL


Series 400 | 500 | 600

PRECISION IN EVERY DETAIL

Smart precision.

In 1984, IAC invented the 2D Scanning technique. The company became a world-wide manufacturer of advanced measuring instruments and measuring machines for the calibration of thread gauges, and is the creator of custom solutions for a wide range of special applications.


Our most successful product since 1995 is the MasterScanner. Many well-known companies around the world use the MasterScanner's high accuracy and precision for the calibration of their thread gauges.

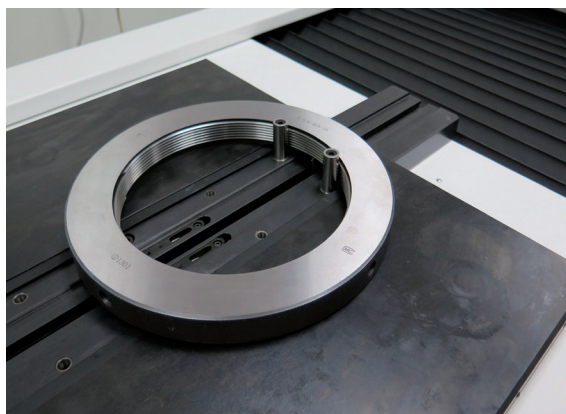

The MasterScanner is the only measuring machine in the world capable of a fully automated calibration, including all thread parameters of a part or a gauge in just a few minutes, and even compares the results with the dimensional tolerances of most popular standards. The MasterScanner is in many ISO 17025 accredited labs all around the world.

IAC manufactures three series of MasterScanners:

- The XP series has a range from 1 mm OD to 160 mm ID
- The XPL-C series has a range from 1 mm OD to 300 mm ID
- The XPL series is for very large gauges from 1 mm OD to over 600 mm, including API!

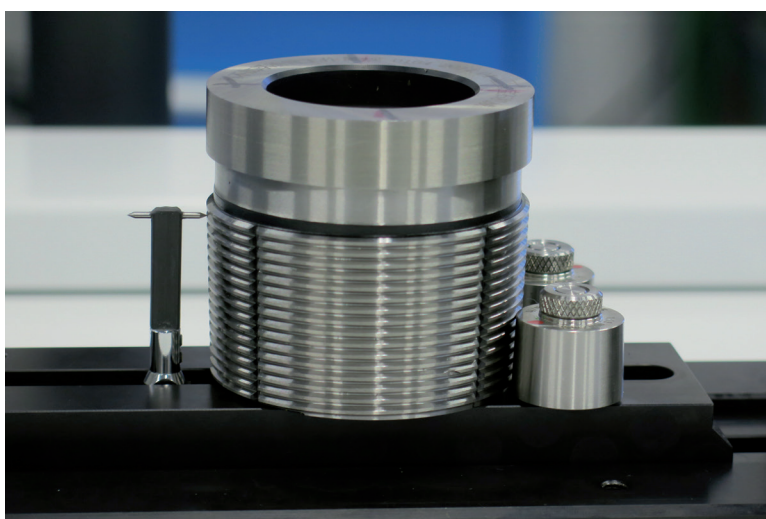


Sample of Master Scanner Reference List:


BMW, Volkswagen, LMW Schmalkalden, Bosch, Mahr, Trescal, NASA, MG Marposs, Fraisa, China AVIC, Boeing, Endress + Hauser, Curtiss Wright, Spiralock Stanley Black & Decker, Tamburini, Krauss-Maffei Wegmann, Techmaster, Baker Gauges, NAMMO, NIST, PMC Lonestar, etc.

Want unparalleled precision in calibration?

First, forget balls and wires.

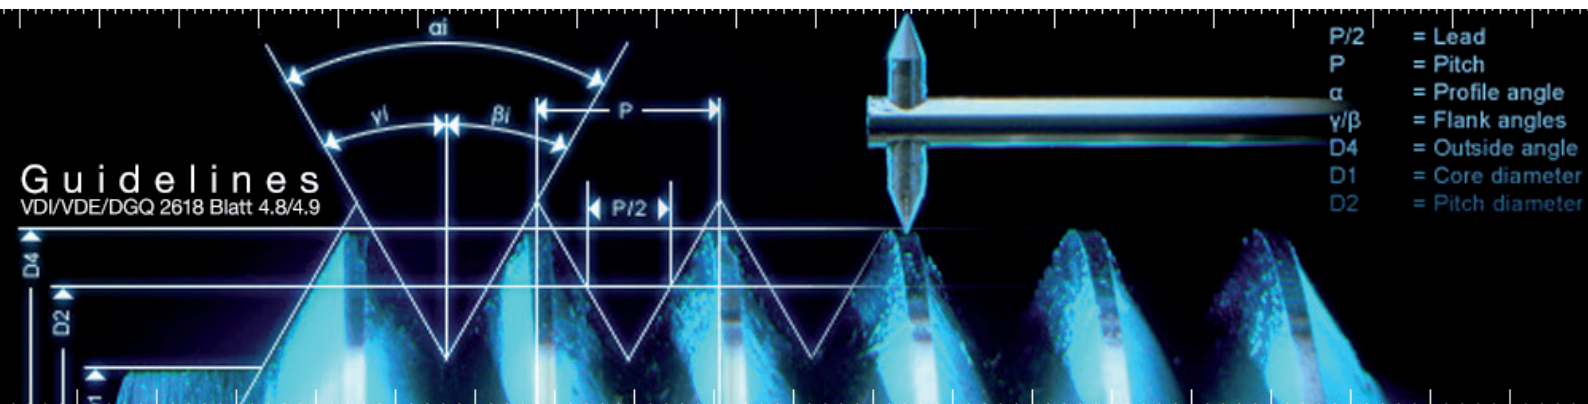

The MasterScanner fulfils all industrial requirements of today for the efficient measurement of plain and thread gauges.

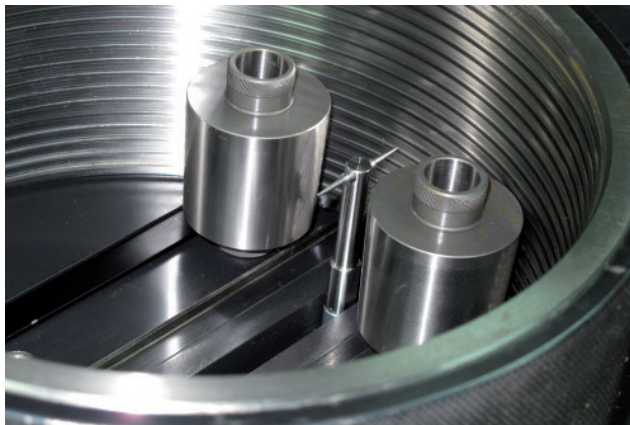

The MasterScanner's excellent measurement uncertainty and sophisticated features make it the ideal instrument for **calibration laboratories**. Automated, fast and reliable calibration has been made possible for a wide range of standard or tapered thread gage plugs, thread ring gauges, plain rings and plugs.

Many thread gauge makers all over the world also apply the scanner for their **production control**. The MasterScanner has the unique capability to present in one automatic cycle, all of the information that is necessary for the optimal setting of the machine tools, so as to minimize bad products and scrap.

Over 1.500.000 calibrations

Because of the long lifetime quality, many MasterScanners have performed over 1.500.000 calibrations, and still **are as accurate as if they were new!**



All MasterScanners are calibrated by laser interferometer for **highest accuracy and optimal traceability**

Invented by IAC: High accuracy 2D Scanning



The excellent accuracy is achieved
by proven measurement technology.

The complete 2 dimensional intersection of the surface of the piece with a mathematical plane through the reference axis is composed by the sequential scanning of two opposite contours by a probe with two styli.

Dynamic Temperature
Compensation


A special feature is that **the actual shape of each of the two styli is automatic mapped multi-directionally for optimal correction of the probing system.**

12000 high resolution measurements are taken per second of scanning, and stored in the memory of the computer. After scanning the first contour, the direction of the measuring force is reversed and the probe scans the opposite side of the gauge. Each measurement point has a resolution of 0,01 μm for each of the two axis, and is stored for data processing.

Direct after finalizing the scanning the MasterScanner calculates and presents the parameters: effective diameter, simple effective diameter, major diameter, minor diameter, pitch, partial flank angles, profile deficiencies, taper, etc.

The **patented COSIMEX Click-On support** for
Cylindrical and Conical Plain and Threaded gauges:

- Both internal and external measurements on one COSIMEX Click-On system.
- High precision centering for thread gauges with steep taper, such as NPTs

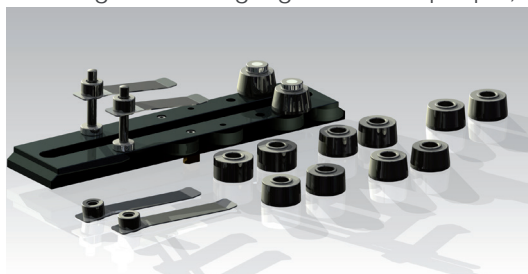

Measured dimensions are:

- Effective pitch diameter
- Simple effective pitch diameter
- Effective diameter equivalent
- Major diameter
- Minor diameter
- Pitch
- Accumulated Pitch deviation
- Flank angles
- Partial Flank angles
- Taper
- Profile deficiencies

Compliance is the best testimony.
And speed is essential for success.



The MasterScanner is compliant with all requirements
for traceability as stated in ISO-9000 and ISO-17025.

The MasterScanner's internal library (IACLIB) is loaded with many worldwide thread specifications, covering tens of thousands of different threads. Once the technician selects the proper spec, the software automatically applies tolerances to the report, and graphs the measurements against the tolerances.


IACLIB integrates the following standards into the MasterScanner:

- ANSI/ASME B1.2 Unified
- ANSI/ASME B1.20 NPT
- API Spec 5B (Incl. Buttress)
- API Spec 7-2
- BS 21 Pipe threads
- BS 919/1 Unified
- BS 919/2 Whitworth
- BS 919/3 ISO Metric
- GB/T 10922
- GB/T 22512.2
- ISO 7/2 Pipe threads
- ISO 228 Pipe threads
- ISO 286 Plain bores and shafts
- ISO 1502 Metric
- ISO 5855-2 MJ tread
- JIS B 0251
- JIS B 0252
- DIN 13 Metric
- GOST 18465-73 Metric
- GOST 18466-73 Metric
- QJ 2761 Chinese MJ thread
- JB/T 10971 Chinese Locking thread
- DIN 2999 Pipe threads
- DIN 7162 Plain rings and plugs
- DIN 40401 Edison
- and even more

The software includes many fail-saves, preventing the operator from introducing human error into the measurement. All measured contours can be converted to DXF-format for further evaluation and analysis by means of a CAD system like AutoCAD.

Some of our software features are:

- Real-time Graphical visualization during scanning
- Measurements are compared with a huge library of International standards
- Easy data export into many widely used formats or custom styled Certificate Templates
- Fast calculations of parameters

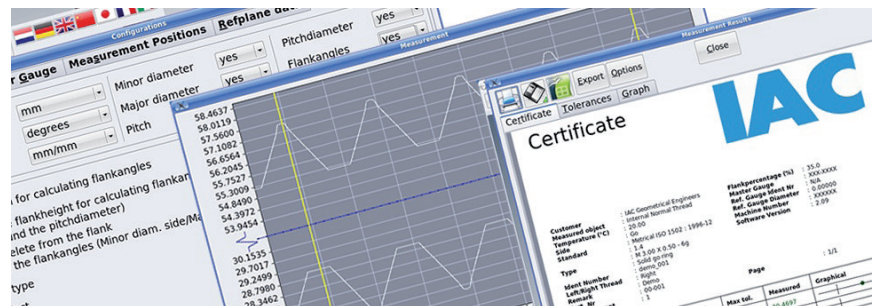

ISO/IEC 17025 Accreditation

The 2D Scanning method of the IAC MasterScanner complies with ISO/IEC 17025 acceptance standard and is at labs accredited by: RVA, DAKkS, SCES, DANAK, A2LA, GOST, SWEDAC, UKAS, NABL, NATA, ÖKD, SIT.



Availability: MasterScanner XPL scan ranges

Model	400	500	600
Range external measurements	1 – 390 mm	1 – 490 mm	1 – 590 mm
Range internal measurements	2,5 – 400 mm	2,5 – 500 mm	2,5 – 600 mm
Max. Scan range	100 / 200 mm	100 / 200 mm	100 / 200 mm
Min. Pitch	0,1 mm	0,1 mm	0,1 mm
Weight	1100 kg	1300 kg	1400 kg

Measurement uncertainty

Thread ring gauges, parallel or tapered (minor diameter over 10 mm, partial flank angles $\geq 27^\circ$)

Minor diameter	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Effective pitch diameter	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Pitch	$1,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$1,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$1,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Flankangles (right and left side)	$0^\circ 6' 0''$	$0^\circ 6' 0''$	$0^\circ 6' 0''$
Taper	$0,1^\circ$	$0,1^\circ$	$0,1^\circ$

Thread ring gauges, parallel or tapered (minor diameter 2,5 to 10 mm, partial flank angles $\geq 27^\circ$)

Minor diameter	$3,5 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,5 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,5 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Effective pitch diameter	$3,5 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,5 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,5 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Pitch	$1,0 \mu\text{m} + 10^{-6} \cdot l$	$1,0 \mu\text{m} + 10^{-6} \cdot l$	$1,0 \mu\text{m} + 10^{-6} \cdot l$
Flankangles (right and left side)	$0^\circ 6' 0''$	$0^\circ 6' 0''$	$0^\circ 6' 0''$
Taper	$0,1^\circ$	$0,1^\circ$	$0,1^\circ$

Thread plug gauges, parallel or tapered (major diameter over 1 mm, partial flank angles $\geq 27^\circ$)

Major diameter	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Effective pitch diameter	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Pitch	$1,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$1,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$1,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Flankangles (right and left side)	$0^\circ 6' 0''$	$0^\circ 6' 0''$	$0^\circ 6' 0''$
Taper	$0,1^\circ$	$0,1^\circ$	$0,1^\circ$

Plain gauges, parallel or tapered (diameter over 10 mm)

Internal diameter ring gauges	$2,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$2,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$2,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
External diameter plug gauges	$2,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$2,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$2,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Taper	$0,1^\circ$	$0,1^\circ$	$0,1^\circ$

Plain gauges, parallel or tapered (diameter 1 to 10 mm)

Internal diameter ring gauges	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
External diameter plug gauges	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$	$3,0 \mu\text{m} + 5 \cdot 10^{-6} \cdot l$
Taper	$0,1^\circ$	$0,1^\circ$	$0,1^\circ$

Technical Data

IAC utilizes the highest
quality measuring systems
from Heidenhain



Transducer system	Opto-electronic HEIDENHAIN scales
Resolution	As from $0,01 \mu\text{m}$
Linear bearing	Air bearings on granite
Actuators	Controlled DC actuators
Measuring force system	Computer controlled in 2 directions
Computer	Integrated LINUX computer
Air supply	6 bar / 90 psi, oil and water free
Electric power	220V, 50Hz / 110V, 60Hz

Ask for **more:** The IAC Comparison Table

FEATURES

IAC XPL / XPL-C

Conventional methods*

Accreditation to ISO 17025

✓

✓

Plain ring and plug gauges

Setting rings and plugs

✓

✓

Tapered rings and plugs

✓

With difficulty

Thread ring and plug gauges Parallel & Conical

Effective diameter

✓

✗

Simple effective diameter (BSW, BS, Unified, JIS etc).....

✓

✓

Diameter equivalent

✓

✗

Virtual diameter

✓

✗

Minor diameter

✓

✗

Major diameter

✓

✗

Pitch

✓

With difficulty

Accumulated pitch errors

✓

With difficulty

Partial Flank angles Left and Right

✓

✗

Profile angle

✓

✗

Straightness deviations of flanks

✓

✗

Taper of conical threads

✓

✗

API 5B (incl. Buttress) & API 7-2 Measurement Option

✓

✗

Advanced Thread Tolerance Libraries

✓

✗

Overall Graphical presentation of all measured
thread parameters in the tolerance zones

✓

✗

Concentricity of major and minor diameter

with reference axis effective diameter

✓

✗

Automatic centering of the gauges

✓

✗

Integrated conversion from internal to external thread

and vs. via COSIMEX

in a few seconds.....

✗

All directional compensation of wear of stylus

✓

✗

Special Applications

Contour and diameter measurement of ball bearings,
ball spindles, etc.

✓

✗

DXF transfer to CAD

✓

✗

Interface by RS232 or LAN Standard Option

Standard.....

Option

Easy switch between Metrical and Imperial systems.....


Standard.....

Option

* e. g. Universal Length Measuring
Machine, Metroscope, SIP, Mahr,
ULM, Helios, Pratt & Whitney, etc.

Precision **Unlimited:**

At your service wherever you are!

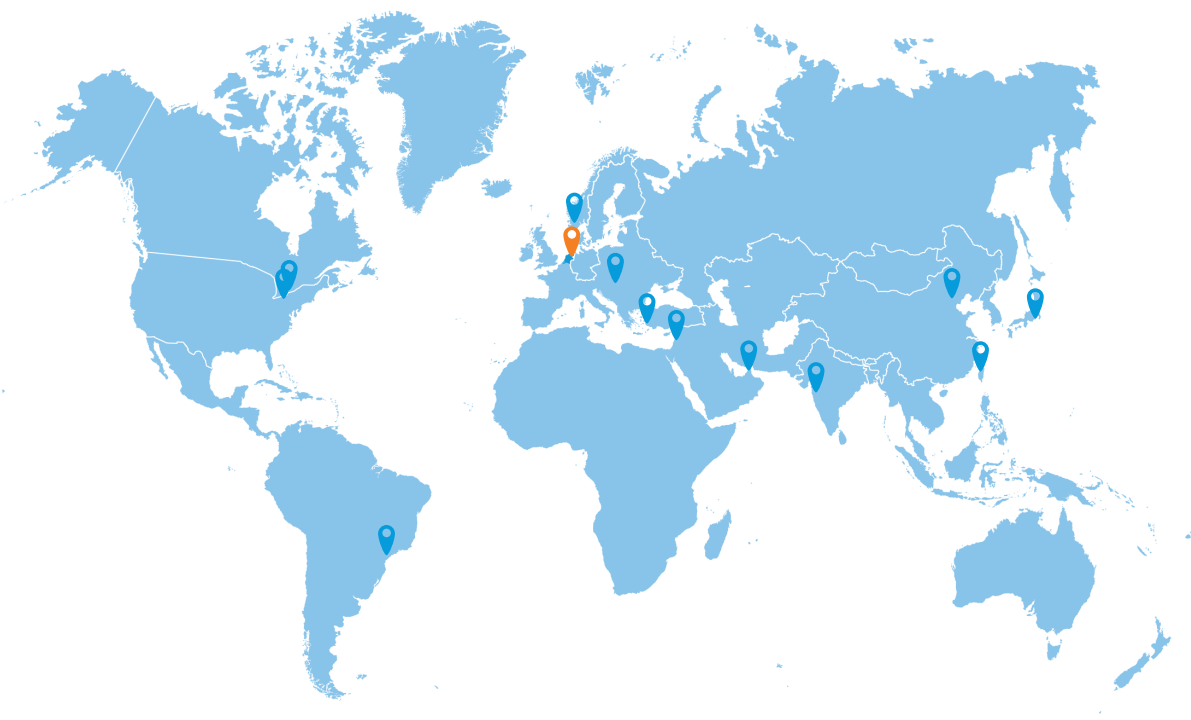

We are proud to work with strong partners in several important markets.

Over and above that, we operate worldwide, wherever precision measurement is needed. So, please don't hesitate to contact us, and we will work out what we can do to meet your individual needs.

Dealer USA	Dealer Canada	Dealer United Arab Emirates	Dealer Brazil	Dealer China	Dealer Japan
MasterScanner USA, LLC 7158 Industrial Park Blvd. Mentor, Ohio 44060 +1 440 918 0001 +1 440 918 0500 info@microlabs-inc.com www.masterscannerusa.com www.microlabs-inc.com	Marsh Metrology 2 - 1016 C Sutton Drive Burlington, L7L 6B8, Ontario +1 (905) 331-9783 +1 (905) 331-5991 info@marshinst.com www.marshmetrology.com	Sun Power-Gen FZCO Plot S-10810 Jafza South PO-Box 262165 Jebel Ali Dubai +971 4 886 2800 +971 4 886 2801 info@sunpower.ae www.sunpower.ae	VAS Tecnologia Industrial Rua São Francisco 506 09530-050 Santo Antônio São Caetano do Sul, SP +55 11 4232-3280 vas@vastecnologia.com.br www.vastecnologia.com.br	Dantsin Rui-Hua Technologies Co. Ltd. A2105, Dongyu Building, Shuguang Xili, Jia 1#, Chaoyang District Beijing 100028, China P.R. +86 10 5822 0390/1/2/3/4/5 +86 10 5822 0398 henry.zhao@263.net.cn www.dantsin.com	CKB Corporation 4F Yamada Aoyama Bldg. 2-10-6, Shibuya, Shibuya-ku 150-0002, Tokyo +81 3 3498 2131 +81 3 3498 2366 info@ckb.co.jp www.ckb.co.jp
Dealer India	Dealer Hungary	Dealer Israel	Dealer Taiwan	Dealer Norway - Drammen	Dealer Norway - Skien
Trimaster Metrology 202 Vasuda Equinox Old Mumbai-Pune Highway Bopodi Pune 411 003 +91 77670 14764 contact@trimaster.in http://trimaster.in	Médian L+G Mérésztechnikai Kft. Szél u. 19 1035 Budapest +36 (1) 3881059 +36 (1) 3881059 medianlg@medianlg.hu www.medianlg.hu	Microtech Ltd. 4 Hamelakha St. Binyamina 3055101 +972-4-6295050 +972-4-6295051 office@microtech.co.il http://microtech.co.il	Asia Technical Services 1 Fl. NO.39 Lane 180, Guang Fu S. Rd. Taipei 106, Taiwan +886 (2) 2781-7892 +886 (2) 2776-4387 celia@asiatec.com www.asiatec.com	HTS Verktoy AS Ingeniør Rybergs gate 97 3027 Drammen +47 32 99 09 00 hts@htsverktoy.no http://www.htsverktoy.no	Øberg Verktoy As Rødmyrsvingen 88 3735 Skien +47 35 50 54 40 +47 35 50 54 45 post@obergverktoy.no www.obergverktoy.no

IAC Geometrical Engineers B.V.

Doorndistel 28
7891 WT Klazienaveen

+31 591 644 103
 +31 591 648 064

P.O. Box 58
7890 AB Klazienaveen
The Netherlands

info@iac-instruments.com
 www.iac-instruments.com

